

MAINTENANCE KITS

STONEAGE TOOL	SERVICE KIT	SEAL KIT	OVERHAUL KIT	TOOL KIT	LUBRICANT
BARRACUDA - BC-K - 20K PSI	BC 600	BC 602	BC 610	BC 612	GP 042
BARRACUDA - BC-H9-C - 40K PSI	BC 600-H9-C	BC 602-H9-C	BC 610-H9-C	BC 612	GP 042
BJV-M	BJ 600-M-X	BJ 602-M	BJ 610-M-X	BJ 612	BJ 048-X
BJV-M24	BJ 600-M24-X	BJ 602-M	BJ 610-M24-X	BJ 612	BJ 048-X
BJV-P16	BJ 600-P16-X	BJ 602-P16	BJ 610-P16-X	BJ 612	BJ 048-X
BJV-20K	BJK 600-X	BJK 602	BJK 610-X	BJK 612	BJ 048-X
BJV-H9	BJ 600-H9-X	BJ 602-H9	BJ 610-H9-X	BJ 612-H9	BJ 048-X
GOPHER - GO-M9 - 20K PSI	GO 600	GO 602	GO 610	GO 612	GP 044
GOPHER - GO-H9-C - 40K PSI	GO 600-H9-C	BC 602-H9-C	GO 610-H9-C	GO 612	GP 044
RAPTOR - RPT	RPT 600-X	RPT 602	RPT 610-X	RPT 612	BJ 048-X
BADGER - 15K PSI	BA 600-X	BA 602	BA 610-X	BA 612	BJ 048-X
BADGER - 20K PSI	BA 600-20K-X	BA 602-20k	BA 610-20K-X	BA 612	BJ 048-X
BADGER - BA-P8 & BA-M9	BA 600-P8/M9	BA 602-P8/M9	BA 610-P8/M9	BA 612-P8/M9	BJ 048-F
BADGER - BA-40K	BA 600-H6	BA 602-H6	BA 610-H6	BA 612-H6	BJ 048-F
CST	CST 600		CST 610		GP 048
TORUS	TR 600	TR 602	TR 610		GP 048
TORUS TR-130	TR130 600	TR130 602	TR130 610		GP 048
TORUS TR-200	TR200 600	TR200 602	TR200 610		GP 048
SA 1900, SA 1909	HI 600		HI 610		GP 048
SL-P8P4	SL 600-P		SL 610-P	SL 612	GP 048
SL-M9AV9	SL 600-K		SL 610-K	SL 612	GP 048
SG-P8P8 & SG-M12M12	SG 600		SG 610	SG 612	GP 048
SG-P12P12-M & SG-M16M16	SG 600-M		SG 610-M	SG 612	GP 048
SG-CCN	SG 600-CCN		SG 610-CCN	SG 612	GP 048
SH-P8P8	SH 600		SH 610		GP 048
SM-P16	SM 600-P16		SM 610-P16		GP 048
SM-P20	SM 600-P20		SM 610-P20		GP 048
HI	HI 600		HI 610		GP 048
UH-H9H6	UH 600		UH 610	UH 612	GP 048
UHS-H9H9	UHS 600		UHS 610	UHS 612	GP 048

NOTE: X Indicates fast or slow rotation speeds available. Please specify when ordering.

MAINTENANCE KITS

STONEAGE SERVICE KITS CONTENTS

SERVICE KITS

Kits contain everything needed for routine maintenance, including: high pressure seals, critical o-rings, a seat for the high pressure seal (where applicable), 6 oz. of viscous fluid for rotation control (where applicable) and a fill tube or syringe. Call or visit our website for specific details regarding individual service kits.

SEAL KITS

Identical to the Service Kits, but does not include viscous fluid, fill tube and syringe. These kits are for customers who already have these items. Call or visit our website for specific details regarding individual seal kits.

OVERHAUL KITS

Kits contain normal wear items, including: a single high pressure seal and seat, shaft seals, bearings and 6 oz. of viscous fluid (where applicable). Call or visit our website for specific details regarding individual overhaul kits.

TOOL KITS

These kits differ for every StoneAge tool. They contain special tools for seating shaft seals or performing other tool-specific maintenance. Call or visit our website for specific details regarding individual tool kits.

LUBRICANTS

Lubricants are available in each manufacturer's packaging for your convenience.