


AUTOPACK-3L-LWP PARTS LIST

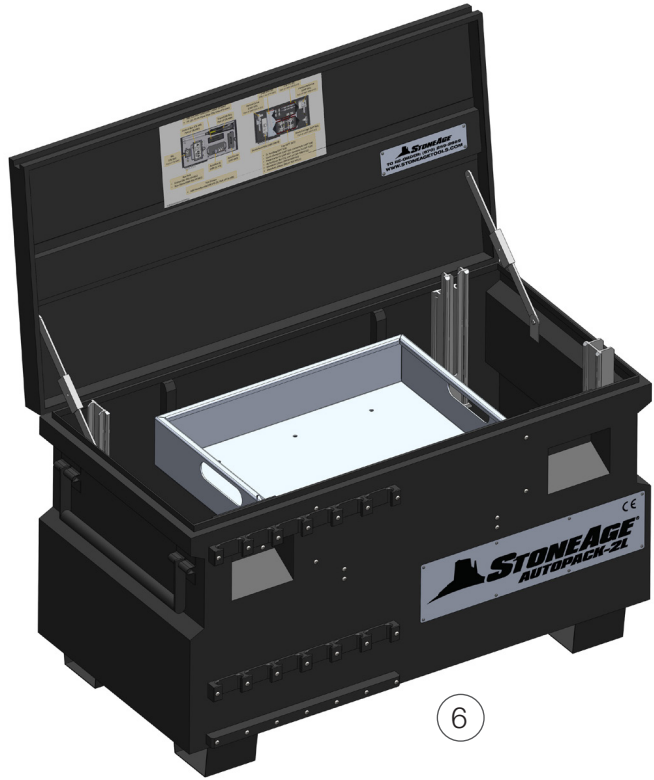


6



1




2

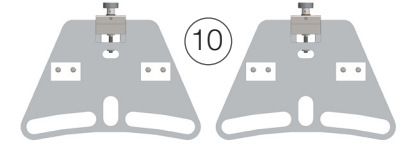

10




3

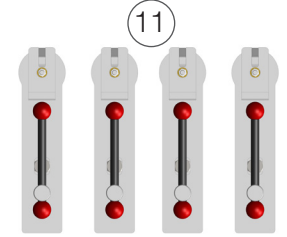


11



7

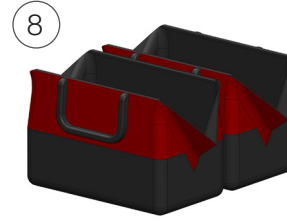

8

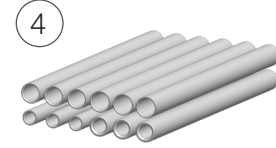


4

(SEE NEXT PAGE FOR CASE CONTENTS)

ABX-3L USER MANUAL

LWP-500-V2 USER MANUAL

#	PART NUMBER	DESCRIPTION	QTY
1	ABX-3L	ABX-3L BELT TRACK DRIVE ASSEMBLY	1
2	ABX-301	GUIDE ASSEMBLY, 3L, HIGH-VISIBILITY	1
3	ABX 369-MP12	Y MANIFOLD, MP12 3 X MP9	1
4	ABX 631-12	KIT, 12" TUBES w/ ADAPTERS (3 EA)	1
5	CBX-ABX	CONTROL PANEL ASSEMBLY	1
6	GPT 067-3L	CHEST, AE AND LWP	1
7	GPT 108	3L COLLET AND HOSE STOP KIT	1
8	GPT 310	TOOL BAG, 18"	2
9	LWP-500-6-V2	LIGHTWEIGHT POSITIONER, 6FT	1
10	LWP 519	PLATE CLAMP ASSEMBLY	2
11	LWP 621	KIT, QUICK CLAMP ASSEMBLY, 4 PCS	1

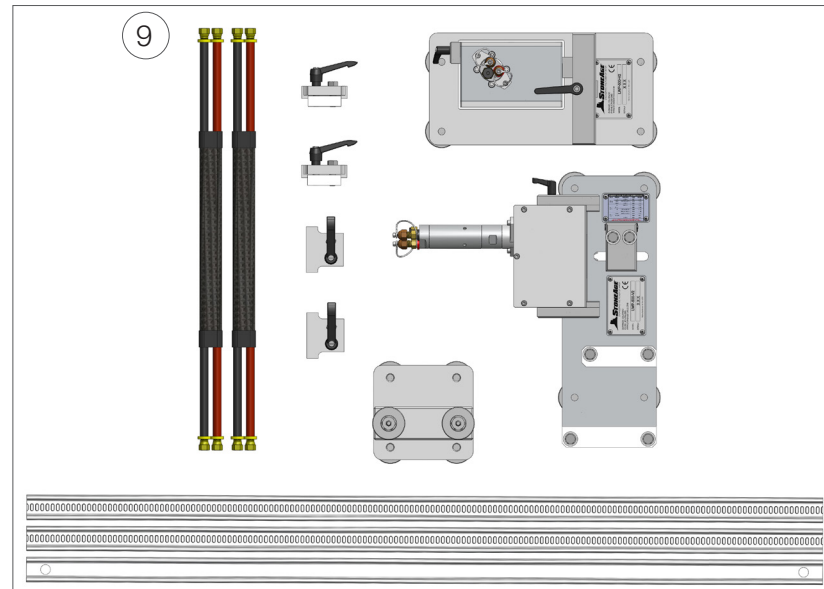

9

5



GPT 108 CASE CONTENTS



#	PART NUMBER	DESCRIPTION	QTY.
1	ABX 171-297	HOSE STOP COLLET, .297	1
2	ABX 171-328	HOSE STOP COLLET, .328	1
3	ABX 171-406	HOSE STOP COLLET, .406	1
4	ABX 171-438	HOSE STOP COLLET, .438	1
5	ABX 171-460	HOSE STOP COLLET, .460	1
6	ABX 171-484	HOSE STOP COLLET, .484	1
7	ABX 171-516	HOSE STOP COLLET, .516	1
8	ABX 171-547	HOSE STOP COLLET, .547	1
9	ABX 171-594	HOSE STOP COLLET, .594	1
10	ABX 171-625	HOSE STOP COLLET, .625	1
11	GPT 023-140	HEX DRIVER, 9/64"	1
12	GPT 081	COLLET KIT CASE WITH PLAIN FOAM INSERTS	1
13	GPT 300.2.2	FOAM, 2L/3L & CHS, LAYER 2, COLLET BOX SECTION	1
14	HS 121-27-34	HOSE STOP CLAMP ASSEMBLY, .27-.34	3
15	HS 121-34-42	HOSE STOP CLAMP ASSEMBLY, .34-.42	3
16	HS 121-42-50	HOSE STOP CLAMP ASSEMBLY, .42-.50	3
17	HS 121-50-56	HOSE STOP CLAMP ASSEMBLY, .50-.56	3
18	HS 121-56-61	HOSE STOP CLAMP ASSEMBLY, .56-.61	3