

# CB 870-K ADAPTER KIT INSTALLATION

## TO INSTALL CB 870-K KIT:



- Thread the female end of the adapter with the black ID band onto the male fitting with the black ID band located on the back side of the CB-ABX Control Box.
- Thread the female end of the adapter with the red ID band onto the male fitting with the red ID band located on the back side of the CB-ABX Control Box.
- Fasten red control line onto the male end of the fitting marked "FWD".
- Fasten black control line onto the male end of the fitting marked "REV".
- Install hard cap and lanyard onto the fitting marked "CLP".

### NOTICE

Forward and Reverse flow control adjustments are opposite the "FWD" and "REV" markings on the control box. The joystick controllers on the control panel function as labeled.

To adjust the **Forward speed**, rotate the flow control valve labeled "REV".

To adjust the **Reverse speed**, rotate the flow control valve labeled "FWD".

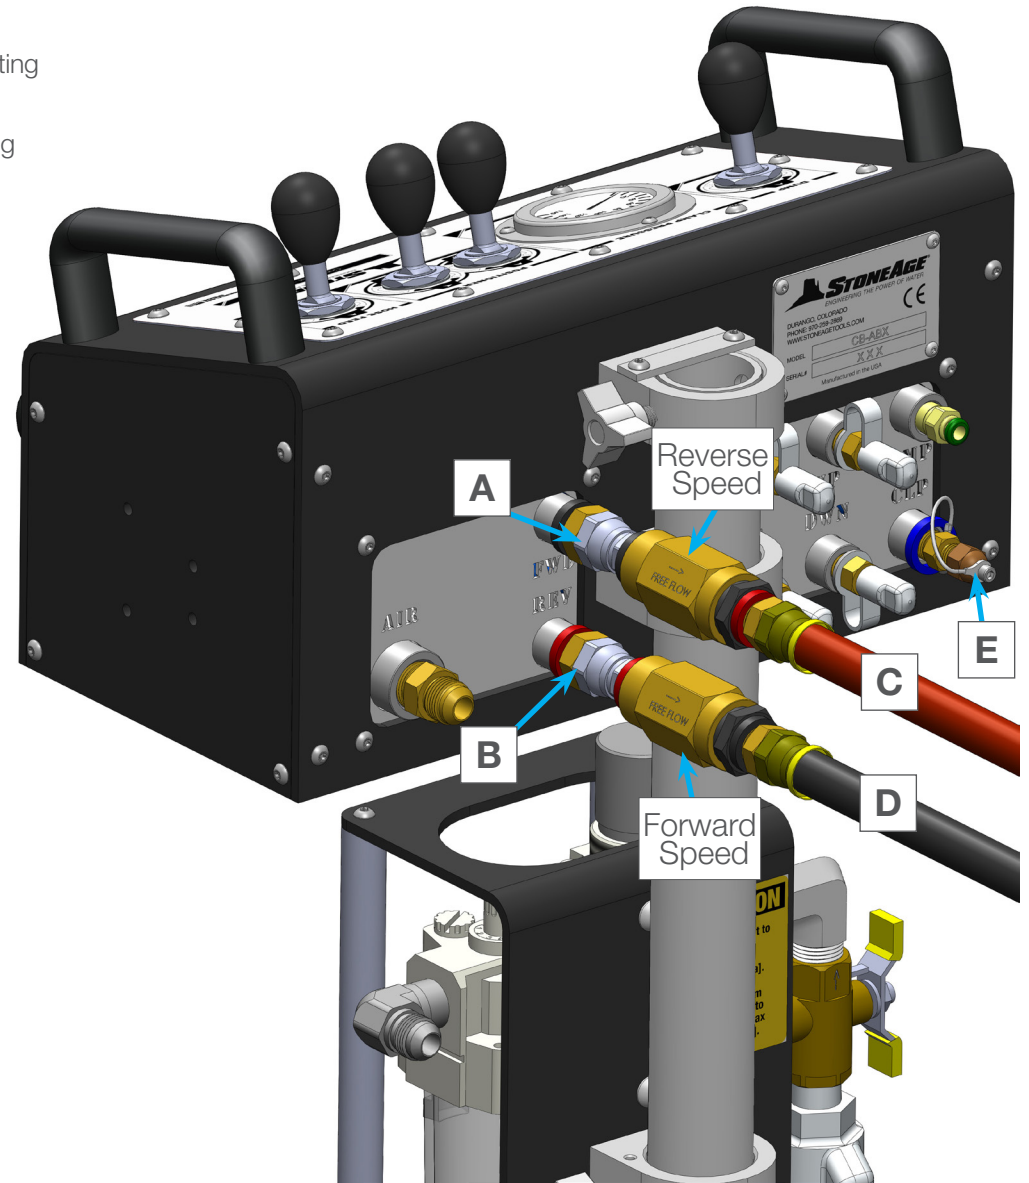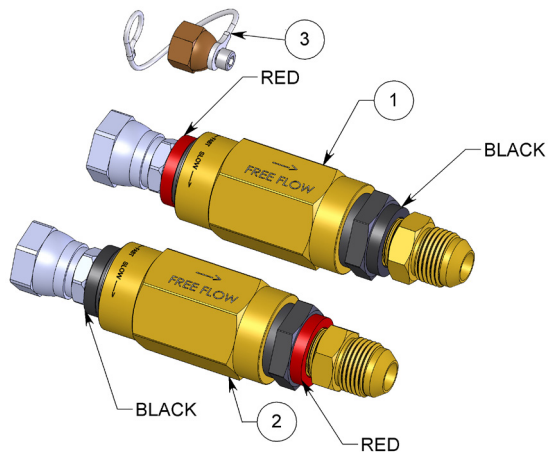

#	CB 870-K KIT PART NUMBERS	QTY.
1	CB 870-REV CB-ABX-PRO-LWP ADAPTER ASSY REVERSE	1
2	CB 870-FWD CB-ABX-PRO-LWP ADAPTER ASSY FORWARD	1
3	CB 873 CAP WITH LANYARD, J4	1